

Product-Notes
Manual

Ground- / Wall- / Ceiling lamp, Flood RF II -30 RGB



Product-Notes Manual

Contents

Safety Instructions	page 3
Proper Use.....	page 4
Care	page 4
Faulty Function	page 4
Changing Lamps.....	page 4
Storage and Disposal	page 4
Purchased parts package	page 5
Technical data.....	page 5
Installation.....	page 6
Programs	page 6

Product-Notes Manual

Dear customer,

thank you for deciding to purchase our product. The product fulfils the requirements of effective European and national guidelines.

To maintain the condition of the product and to ensure safe operation, you - as the user - must observe the product notes and the operation manual! They contain important information for the start-up and handling. It is important, therefore, that these documents are archived carefully for referring to information at a later stage. aufbewahren.

1. Safety Instructions

We are not responsible for any property damage or personal injury caused by failure to observe these productnotes and manual, improper handling or unauthorised modifications.

It can only be installed by a qualified electrician.

Make sure that the item has not been damaged during transport before putting the light into operation. It maynot be operated if there are any damages to electrical parts.

The luminaire may only be operated completely with its protective cover.

It may only be operated once removed from the packaging.

The type plate must not be removed.

The connection lines in the building must be disconnected before installation and secured against beingswitched back on. For this, trip the corresponding fuse switch in the building installation.

Make sure the electrical specifications for the connection lines correspond with the specifications given on thenameplate of this product.

We recommend that you protect the product with a residual-current-operated protective device. Follow all installation regulations applicable at your location.

Make sure that the cables and plugs are not subject to tension or torsional forces and do not bend the cables. Protect all cables and insulation against possible damages.

Output lines should be laid separately and spaced apart from other lines. The power supply cables and thelamp feeders must not cross each other.

Do not allow the product to come into contact with extreme heat or naked flames.

Use the supplied fastening material only when it is suited for the installation background.

The product must not be covered with objects (decorations) or thermally insulating coverings /similar materials.

Before disposal of the packaging material make sure that all components are removed.

Remove the batteries for longer periods out of use. Batteries may leak. (risk of chemical burns)

Keep packaging material away from the reach of children and pets. The packaging contains small parts thatmay be swallowed by children.

Do not stare into the light source / light at a distance <2.9 m!

Product-Notes Manual

2. Proper Use

This product is only intended for lighting purposes and may only be operated on normal or non-flammable surfaces.

The use can be done in indoor/outdoor areas.

Make sure that the surface is suitable for permanently and reliably taking the weight of the light.

3. Care

Repairs may only be carried out by a qualified electrician.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Disconnect the entire product from the mains first and allow it to cool down before cleaning or maintaining.

Use a dry or slightly moistened cloth for cleaning.

Never use any chemicals, flammable cleaning agents or abrasives. These may cause damage to the surface coating and/or the insulators.

4. Faulty Function

Light switched on at the switch?

Transformer mounted and connected properly?

If available; remote control intact? Check the batteries.

Check the connected lines.

Lamp defective?

5. Changing Lamps

The light source of this lamp is not replaceable. When the light source has reached its end of life, replace the entire luminaire.

6. Storage and Disposal

Used electronic devices must be brought back to public collection points and must not be disposed of as household waste.

Storage in a dry and clean environment. Do not strain the product mechanically during storage.

Batteries containing pollutants are marked with the symbol showing a crossed out bin and one of the chemical symbols Cd (=battery contains cadmium), Hg (=battery contains mercury) or Pb (=battery contains lead).

Precautions must be taken against short-circuiting if the batteries are not fully discharged. Only discharged batteries may be put in the old battery containers you find in shops and at public disposal companies. Shortcircuiting can be prevented by isolating the poles with sticky tape.

Product-Notes Manual

7. Purchased parts package

- 1x RF RGB 30 W Flood Light
- 1x Touch-Remote
- 1x Manual

8. Technical data

1. RGB RF Flood Light

Power supply system:	100-240V AC/50-60Hz
Power max.:	10 W
Protection class:	IP 67
Frequency:	2,4 GHz
Channel:	3
Programs:	13
Working temperature:	-20°C - +50°C
Dimension (LxWxH):	180 x 80 x 230 mm
Weight:	1,56 kg



2. Touch-Remote

Operation:	2x AAA Batteries (excl.)
Frequency:	2,4 GHz
Distance:	ca. 20 m (inside)
Dimension (LxWxH):	110 x 52 x 20 mm
Button „O/-“:	ON/OFF and addressing with “ON”
Touch Wheel:	RGB
Button “P”:	Change the program
Button “S”:	Speed control
Button “D”:	Dimmer



Product-Notes Manual

9. Installation

1. Connect Touch-Controller with the RGB RF Flood Light

- a. Switch on the Power of the Flood Light and push and hold the “ON” button within 1 sec. on the Touch-Controller, after that the LED flashes up 3 times, then the Touch-Controller and the Flood Light are connected.
- b. If this step isn't working please try again.

2. Disconnect Touch-Controller from the RGB RF Flood Light

- a. Switch on the Power of the Flood Light and push and hold the “ON” button within 1 sec. on the Touch-Controller, LED flashes up 9 times, then the Touch-Controller and the Flood Light are disconnected.
- b. Now you can address the Flood Light again with the same or another Touch-Controller.

10. Programs

- White
- Red
- Green
- Blue
- Fade In Fade Out
- Ramp Up
- Ramp Down
- Color Flash
- Shop Window
- White Strobe
- Color Change
- Disco
- Fire

The product is CE compliant and meets all the essential requirements of Directive 2014/53/EU RED.

The CE Declaration of Conformity for this product can be obtained at the following address.

<https://shop.deko-light.com/>

